

How to update your product's firmware in Windows using Epson Software Updater


If you do not have the **Epson Software Updater** utility, you can download it at <http://www.epson.com/Support/wa00590>

1. Do one of the following to open Epson Software Updater:

Windows 10: Click the Start icon and select **Epson Software > Epson Software Updater**.
Windows 8.x: Navigate to the **Apps** screen and select **Epson Software > Epson Software Updater**.

Windows (other versions): Click the Start icon and select **All Programs** or **Programs > Epson Software > Epson Software Updater**.

2. Select your model from the list, if necessary.
3. Select **Firmware Updater** by checking the box next to it. (Epson recommends installing all Essential Product Updates.)
4. Click the **Install item(s)** button.

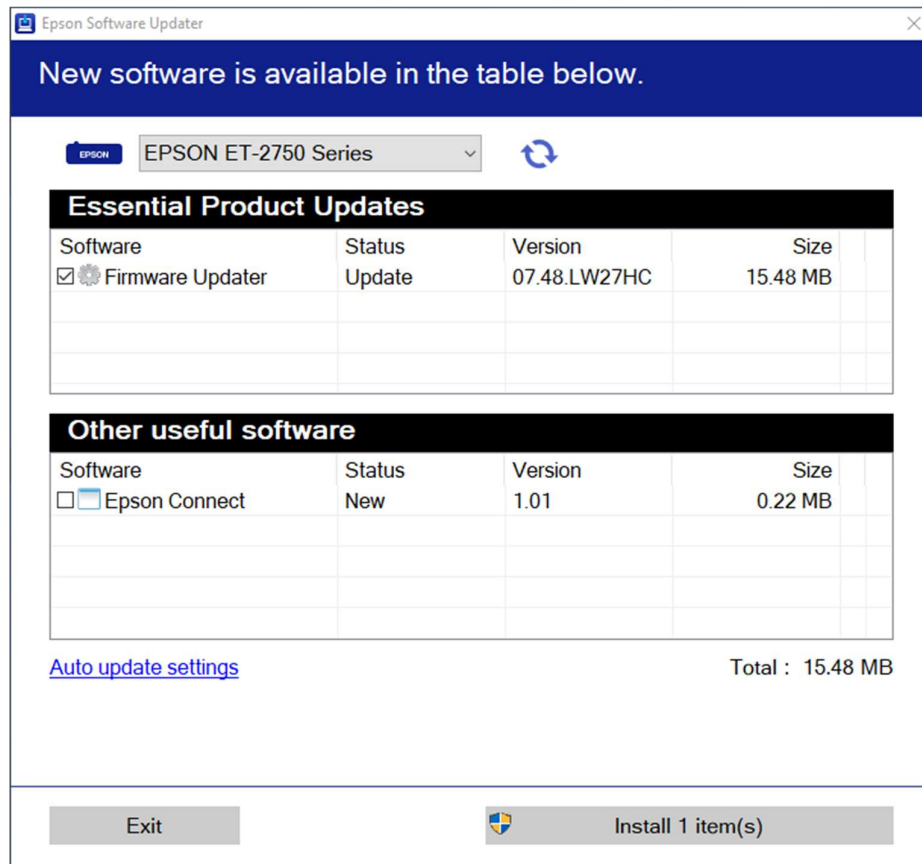


5. If you see a message asking "Do you want to allow this app to make changes to your device?", select **Yes**.

6. Select **Agree** and click the **OK** button.




7. When you see the Epson Firmware Updater screen, click the **Start** button.

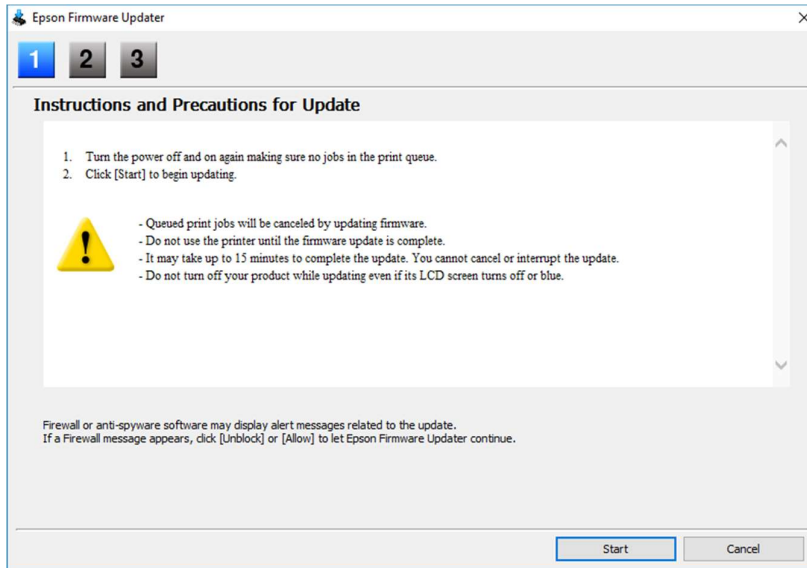

Caution:

- Wait for the firmware update to complete before using the printer.
- Do not unplug the power cable or turn off your printer while firmware is updating. If your printer has an LCD screen, do not turn the printer off even if the screen turns blue or turns off.
- The printer will restart on its own once the update has completed. If your printer has an LCD screen, it will show the home screen after restarting.

8. When the firmware update is complete, click the **Finish** button.

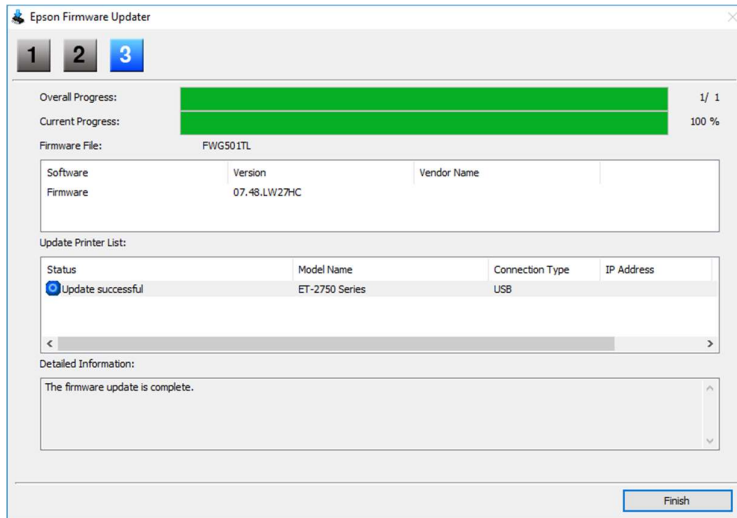

9. When you see a completion message, click the **OK** button and close the Epson Software Updater utility.

