



How to update your product's firmware in Mac OS X or macOS using Epson Software Updater

If you do not have the **Epson Software Updater** utility, you can download it at <http://www.epson.com/Support/wa00590>


1. Open Epson Software Updater from the **Applications > Epson Software** folder.
2. Select **Epson Firmware Update** by checking the box next to it, then click the **Install** button.

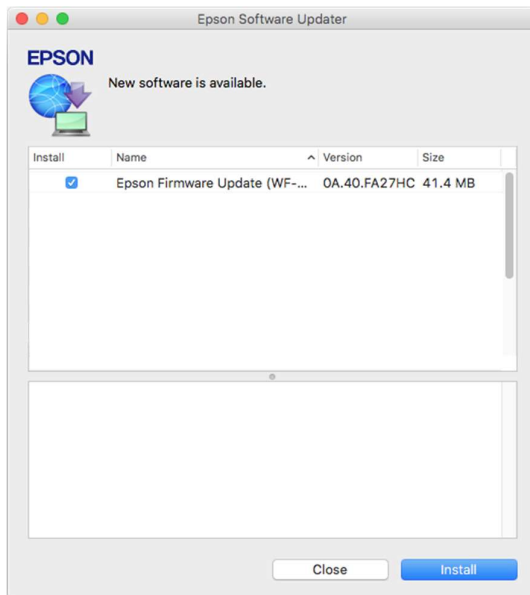

3. Select **Agree** to continue.

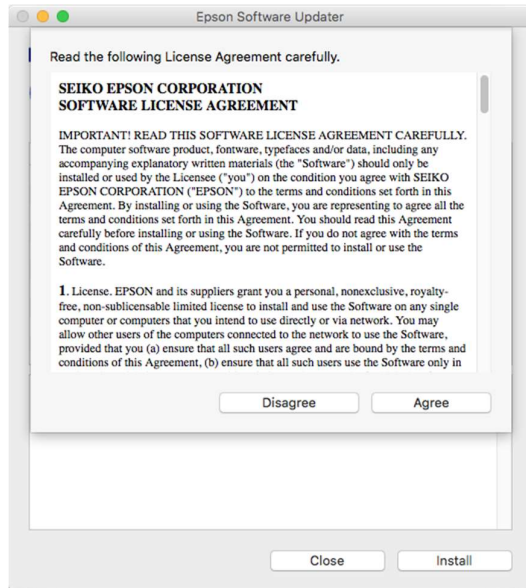

4. Enter your user name and password, if necessary.

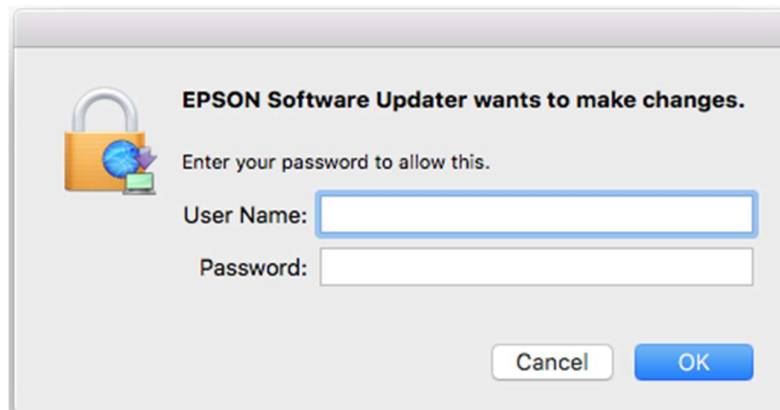


5. To run the firmware update utility, double-click the **Epson Firmware Updater** icon in the window that appears.




Epson Firmware Updater

6. Select **I Agree** and click the **Next** button.

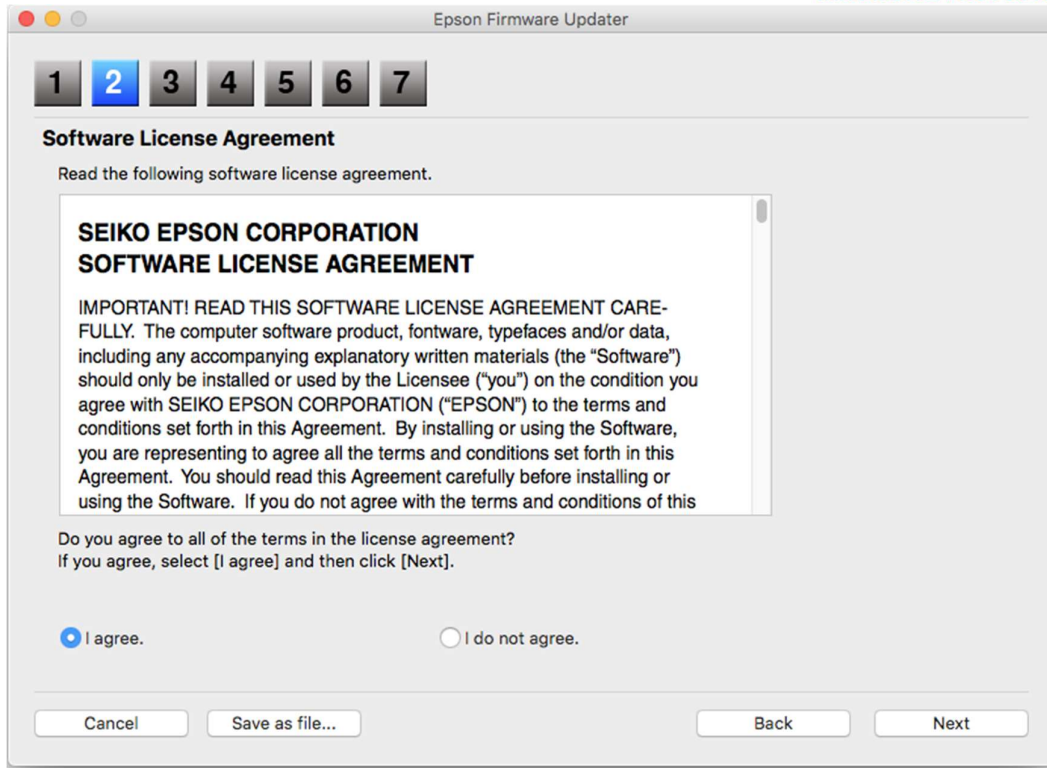

7. Click the **Start** button and then the **OK** button.

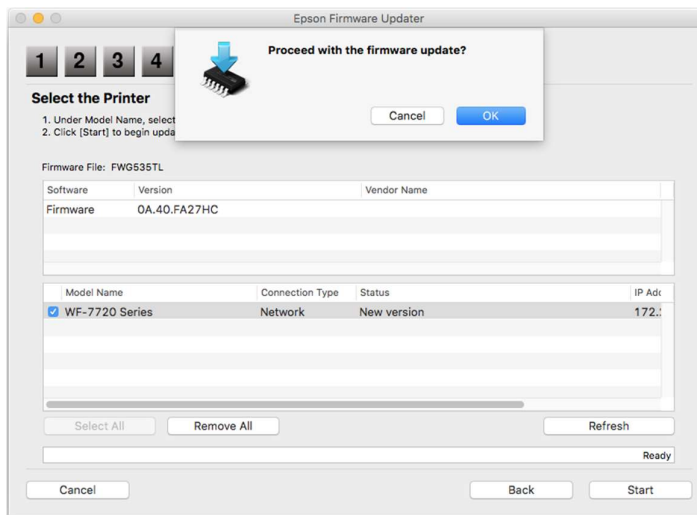

Caution:

- Wait for the firmware update to complete before using the printer.
- Do not unplug the power cable or turn off your printer while firmware is updating. If your printer has an LCD screen, do not turn the printer off even if the screen turns blue or turns off.

- The printer will restart on its own once the update has completed. If your printer has an LCD screen, it will show the home screen after restarting.
8. Click the **Finish** button, then close the Epson Software Updater utility.

